




# Putco Luminix Light Bar Wireless Remote With Configurable Button Instructions.

Congratulations on your purchase of a high-quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:30 a.m. - 5:00 p.m. (Central Standard Time).

## FREEDOM BLADE INSTALLATION DIAGRAM AND PROGRAMING INSTRUCTIONS

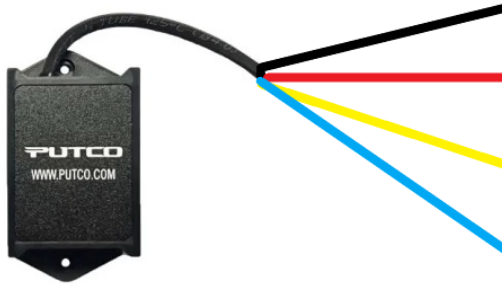

### FREEDOM BLADE INSTALLATION

**BLACK WIRE** | Connect this to a constant ground (-).  
Recommended connection: Black wire on the 4-pin connector of your Freedom Blade.

**RED WIRE** | Connect this to a 12V(+) Accessory.  
Recommended connection: Freedom Blade Power is connected to the fuse bo

**YELLOW WIRE** | Connect this to the "Tapwire" of your Freedom Blade.  
Recommended connection: This wire must be connected to the orange "Tapwire" on your Freedom Blade.

**BLUE WIRE** | This wire is not used for the Freedom Blade  
Do not connect this wire to anything! Simply use electrical tape to prevent a shortage.

### PROGRAMMING MODE

**WARNING:** It is NOT recommended to turn off the engine/truck while the Freedom Blade light bar is in programming mode. Because of this, we do not recommend entering the programming mode until your light bar is 100% electrically installed.

#### Step 1

To enter programming mode, start the engine and wait for a full minute or until is done with its default start-up sequence.

#### Step 2

Press the button "A" on your wireless remote.

#### Step 3 (Start-up sequence programming).

Press "B" once, and your Freedom Blade light bar will start flashing a start-up sequence... if you don't like it simply continue to press "B" again to select a different one.

(If you like the shown sequence, simply wait 5 seconds and the light bar will remember the shown sequence as its default flash).

Repeat the same steps above with your Turn signal and Brake light sequence.



*Thanks and enjoy your new Putco product!*