



PUTCO®
HORNET™
AMBER LED STEALTH ROOFTOP STROBE LIGHT BAR

INSTRUCTION GUIDE

WIRING



Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday–Friday 8:00am – 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

CONTENT LIST

QTY

Hornet Light

1

12V Ground Switch

1



To wire the switches properly, refer to the wiring diagram in Figure 1.

NOTE: When the switch is configured correctly it should function as follows: The primary switch, or the switch hooked up to the red wire, controls power to the Hornet light. This switch will turn the light on and off. To switch modes, the primary switch must be in the ON position. While the Hornet light is receiving power via the red wire, give 12V power to the yellow wire. If it does not change modes, check to make sure that the light is receiving power from the primary switch. The light will remember the mode even with the switch turned off.

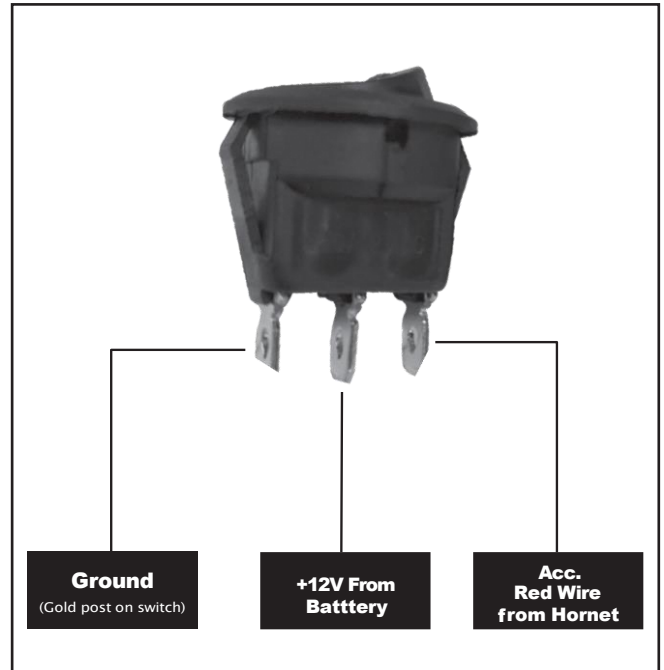


Figure 1: Switch wiring diagram.

HORNET WIRING DIAGRAM
RED (+) 12V POWER
BLACK (-) GROUND
TRI-COLOR HORNET WIRES
YELLOW (- TAP) CONFIGURE PATTERN
WHITE (- TAP) CONFIGURE COLOR

TO PROGRAM YOUR TRI-COLOR HORNET;

Step# 1 - Turn on the light bar.

Step# 2 - Select the desired color and pattern while the light bar is strobing, by briefly tapping the Yellow or white wire into a (-) terminal or wire.

Step# 3 - After making your selection, the Hornet light bar will program the configuration. Secure and isolate the wires with electrical tape.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.