

2009-2012 Ram LD / 2010-2014+ Ram HD Fog Lamp Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974
 Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
 Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Passenger Fog Lamp Assembly	1
Driver Fog Lamp Assembly	1
5/16" - 18 Bolt	4
5/16" - 18 Lock Nut	4
5/16" Washer	4
17/32" Washer	2

Tools Needed:

- 10mm Wrench
- 1/2" Wrench
- Pliers

Fog Lamp Installation


1. Remove Fog Lamps from packaging. Check to see if all parts from above table of kit contents are included.



2. Remove (3) 10mm Bolts from factory fog lamp bracket. Unplug bulb from factory fog lamp and remove Lamp assembly from truck. **Passenger side is shown.** Repeat on Driver side. **(wire loom clips may need to be removed to get fog lamp out)**
3. When factory fog lamp assembly is removed, use pliers to unclip (3) plastic clips **(locations shown above)** to remove bracket from factory fog lamp. **Driver side is shown**


LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

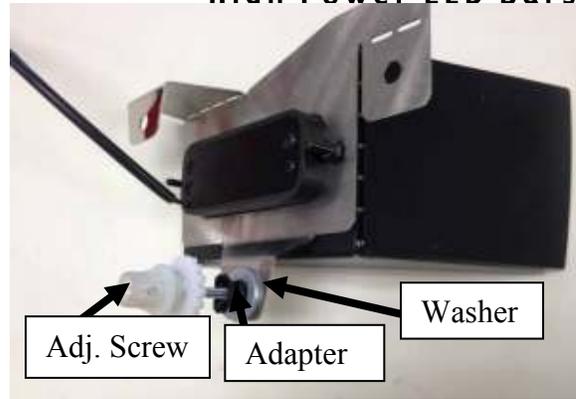

4. Remove adjustment screw and plastic adapter from factory fog lamp. **(will be used in Step 5)** Place fog lamp aside, this will not be used.

5. Place plastic adapter through 17/32" washer and into square hole on Putco fog lamp assembly as shown above. Thread adjustment screw into plastic adapter. **(shown above)**

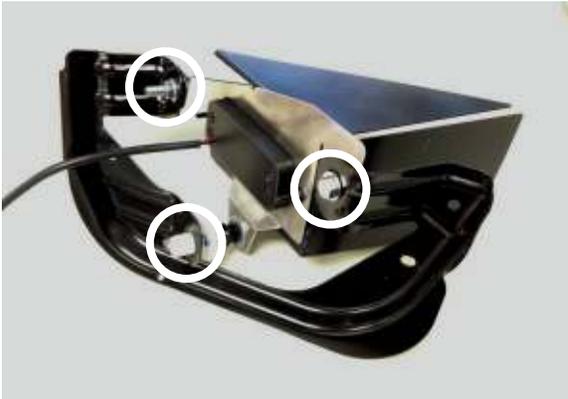

6. Snap adjustment screw clip back into factory bracket (removed in Step 3). Secure upper mounting locations with the 5/16" hardware. **(Do not install washer on same side as lock nut)** Use 1/2" wrench to tighten hardware.

7. Mount light assembly into truck in reverse order of Step 2 using (3) factory 10mm bolts. Repeat Steps 3-6 on passenger side.

8. Adjust fog lamps so that both lights are level and not facing upward.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.