

2015+ Ford F-150 / 2017+ Super Duty Fog Lamp Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty.
Fog Lamp Housing	2
Driver Mounting Bracket	1
Passenger Mounting Bracket	1
#10-32 x 3/8"- Pan Head Screw	4
#10 Lock Washer	4
SS Flat Washer	2

Tools Needed:

- Flathead Screwdriver
- Philips Head Screwdriver

Fog Lamp Installation

1. Remove Fog Lamps from packaging. Check to see if all parts from above table of kit contents are included.

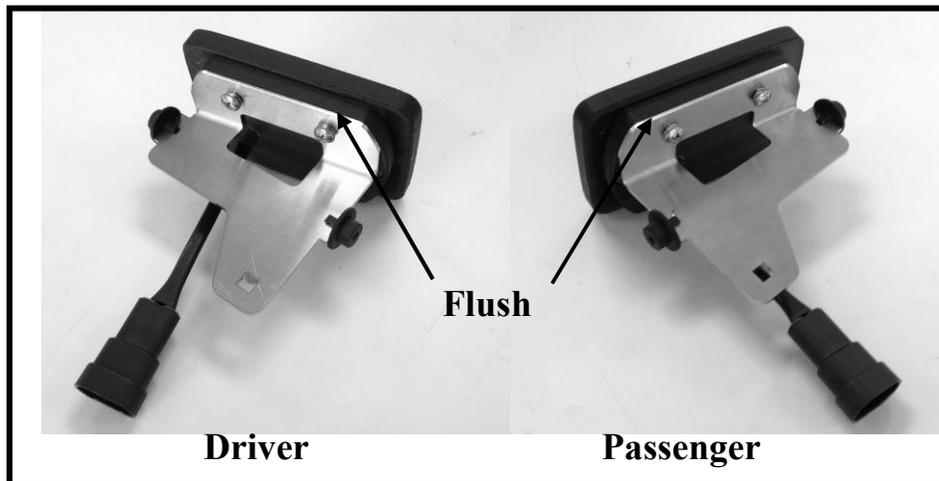


2. Install driver and passenger brackets on to fog lamp housing using supplied hardware. Verify that top edge of bracket is flush with edge of fog lamp housing. (Shown Above) Tighten hardware with Phillips Screwdriver.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.


(Note: For Steps 3- 7, Passenger side is shown, repeat on drivers side also)

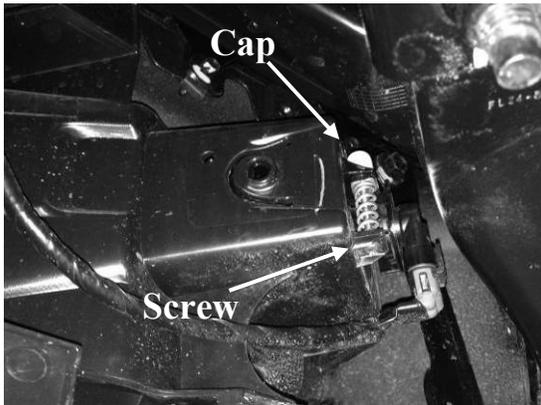

3. Under front bumper of the truck, unplug wiring harness from bulb, remove white cap. Then, remove factory adjustment screw using Phillips Screwdriver. **(Spring will come off when screw is removed)** Set parts aside, they will be used later for install.



4. Use Flathead screwdriver to pry out clips on each side of factory fog light housing. While prying on clips pull factory fog lamp out of housing from the front of truck.

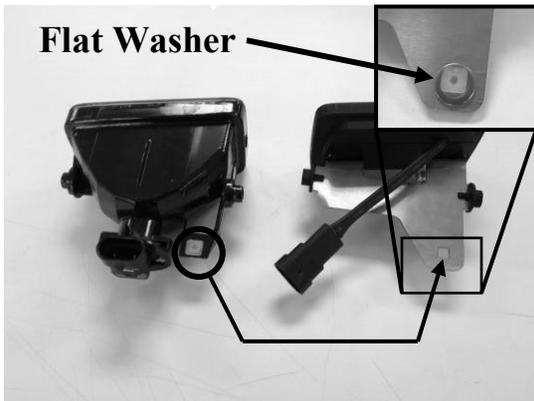

5. Relocate plastic screw nut from factory fog lamp to square hole in fog lamp assembly from Step 2 as shown above. Place flat washer between plastic screw nut and SS bracket **(Flat part of plastic nut goes toward bottom of assembled light)**



6. On fog lamp assembly verify that logo is right-side up. Then, firmly install fog lamp assembly into factory fog lamp housing until both clips snap into place.

7. Reinstall screw, spring, and cap in opposite order of Step 3. Adjust to factory location using Phillips Screwdriver. Plug fog lamp into factory harness and Enjoy! **Verify the plug is fully engaged and does not pull apart.**

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.