

## 2007-2014 Chevrolet Silverado HD Fog Lamp Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974  
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)  
Contact your PUTCO dealer for other quality accessories.

**Please read all instructions before installation and to check to see that all parts are included.**

KIT CONTENTS:	
Description	Qty.
Passenger Fog Lamp Assembly	1
Driver Fog Lamp Assembly	1
1/4" - 20 X 3/4" Bolt	4
1/4" Washer	4
3/8" Stainless Steel Spacer Washer	2

### Tools Needed:

- 7mm Socket Wrench
- 10mm Socket Wrench
- 15mm Socket Wrench
- 7/16" Socket Wrench
- Pliers

**Before installation, remove fog lamps from packaging and verify all parts from above "Kit Contents" table are included in your kit.**

### Fog Lamp Removal

1. From the underside of the vehicle, remove the splash guard using a 10mm socket wrench. (4 bolts in total per side) Refer to Figure 1.




Figure 1

Driver Side Shown

#### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

2. From the backside of the bumper, remove the bumper support brace on both sides of the vehicle using a 15mm socket wrench (3 bolts in total per side). Set brace aside, noting the right from the left and keeping bolts separated. Refer to Figure 2.

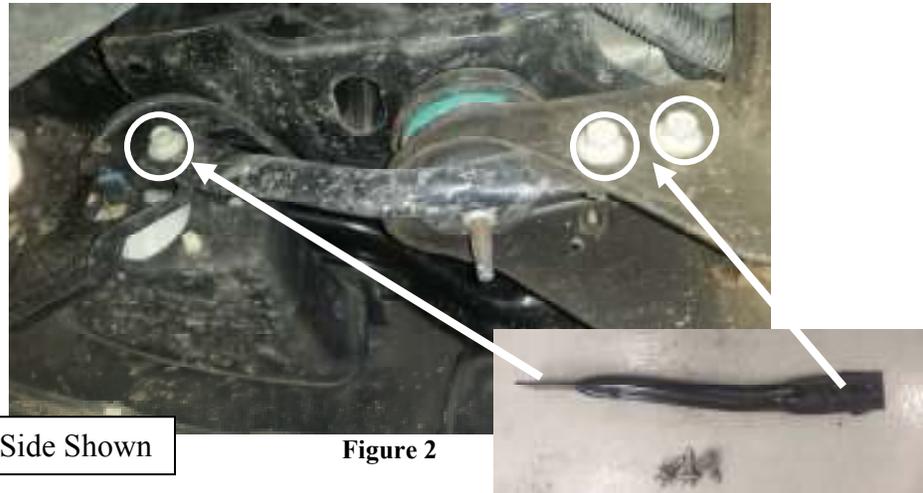

3. Remove the bolts holding the light bezel using a 7mm socket wrench. (2 bolts in total per side) Refer to Figure 3 for bolt locations.



#### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

4. Unplug the fog light and remove the lower bolt from the support bracket using a 10mm socket wrench. (1 bolt in total per side) Refer to Figure 4 for bolt location. With the bracket loosened, the fog light and bezel will remove from the bottom of the bumper.



Figure 4

Driver Side Shown

5. With the bezel out of the vehicle, you can now remove the fog light. Use pliers to depress tabs on the plastic retaining clips to remove. Refer to Figure 5 for tab locations.




Figure 5

Driver Side Shown

#### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.


6. With the fog light out of the bezel, remove the adjuster screw by unthreading the adjuster from the snap-in insert. Remove the snap-in insert with pliers. Set both the adjuster and insert aside for use with the new LuminiX fog light. Refer to Figure 6.

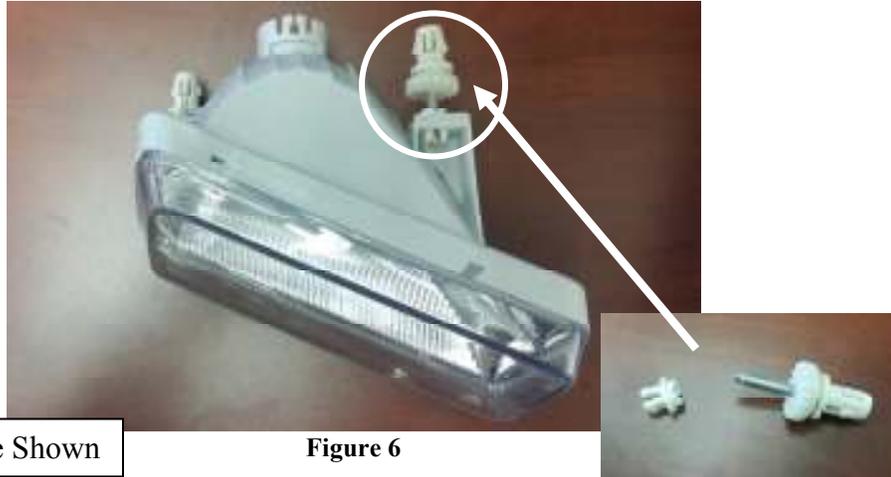

7. Repeat steps 1-6 for passenger side.

## Fog Lamp Installation


1. Take the spacer washer provided with the kit and install it on the snap-in insert. Then, snap the insert into the back of the LuminiX fog light. Refer to Figure 7. Thread adjuster screw back into the snap-in clip.

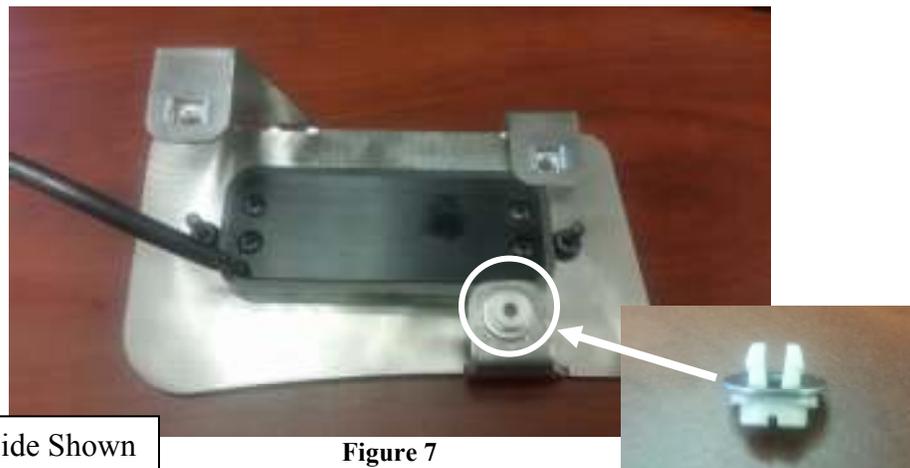

### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

2. Install the LuminiX fog lamp into bezel by snapping the adjuster clip into the bezel. Install the 1/4"x20 bolts and 1/4" washers provided using a 7/16" socket wrench. (2 bolts and washers in total per side) Refer to Figure 8.

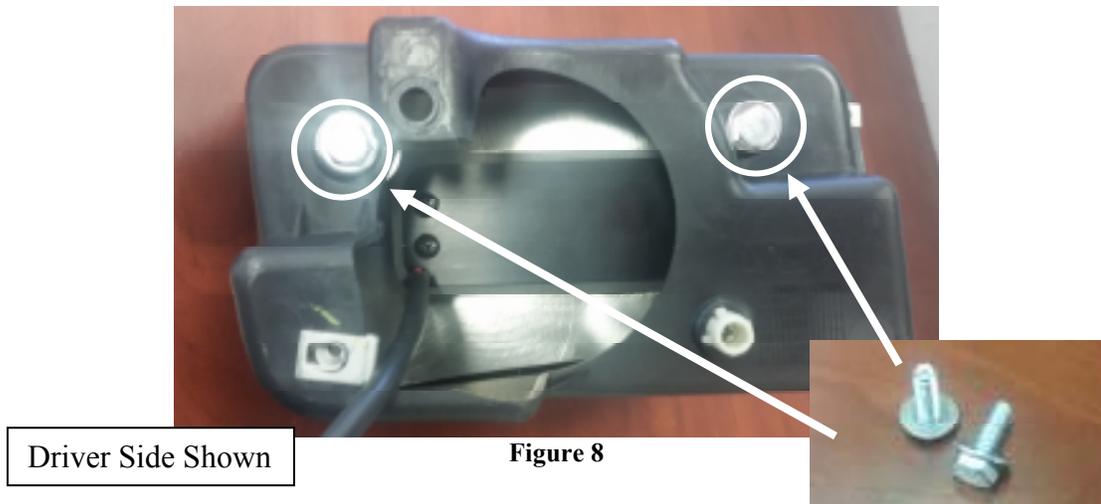

3. Connect factory harness to fog lamps. Check that the connectors are fully seated and cannot be pulled apart easily.
4. Turn on LuminiX fog lamps to ensure everything is working properly.
5. Repeat steps 1 - 4 ("Fog Lamp Removal" section) in reverse order to reinstall fog lamp assembly. Ensure all bolts are torqued to factory specifications. (15mm bolts torque to 35 ft lbs)
6. Repeat steps 1 - 5 for passenger side.
7. Adjust fog lamps so both lights are level and not facing upward.

#### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.