

2011-2016 Ford Super Duty Ford Emblem Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS: 92300	
Description	Qty.
Medium Ford Emblem	1
Large Ford Emblem	1
Bolt Kit	1
KIT CONTENTS: 92400	
Small Ford Emblem	1
Large Ford Emblem	1
Bolt Kit	1
3M Ford Emblem Tape	1
Alcohol Prep Pad	1

Tools Needed:

- 10mm, 7/16" Socket and Ratchet
- Pliers
- Flat Blade Screwdriver
- T-30 Torx Bit (92300 Only)

Front Emblem Installation

1. Remove emblems from packaging. Check to see if all parts from above kit contents table are included.
2. Open hood and remove four 10mm bolts from the top of the grille and set aside for re-installation.
3. Remove one push clip from the air deflector on the driver side near the headlight.
4. Carefully unclip five retainer clips that are behind the grille near the bottom. Use a flat head screw driver to release the retainer clips.
5. Reposition factory grille away from the vehicle and place face down on a clean non-abrasive workbench.

CAUTION: Take the proper precautions to protect the face of the grille from cosmetic damage.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

6. Remove the 10mm nut marked in figure 1.1

7. Gently pry on the tabs marked in figure 1.1 to release the factory emblem from the grille

8. Install the provided threaded shafts into the back of the new emblem by hand until shafts bottom out in emblem.

9. Insert emblem into the grille as demonstrated in figure 1.2

10. Finish installing the emblem into the grille by inserting the washers and tightening the lock nuts using a 3/8" socket and ratchet. Be careful not to damage the plastic from overtightening the fasteners

11. Reinstall the grille following steps 1-4 in reverse

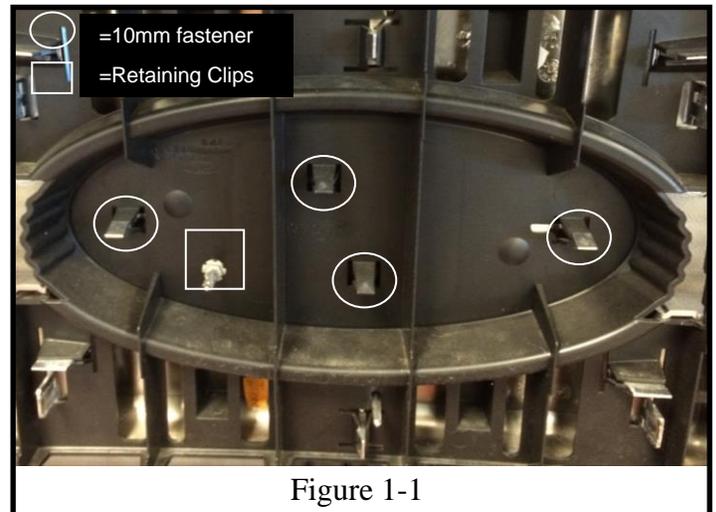


Figure 1-1

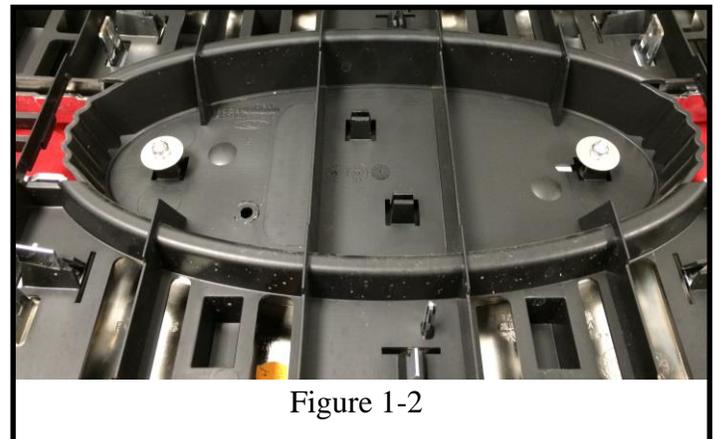


Figure 1-2

Rear Emblem Installation Kit: 92300

1. Lower tailgate and remove the eight T-30 screws holding the cover marked in figure 2.1
2. Remove the cover
3. Locate and remove the two 10mm screws holding the rear emblem on
4. Unclip the two shafts that held the two 10mm nuts but gently pushing upwards on them and pulling the emblem off the tailgate

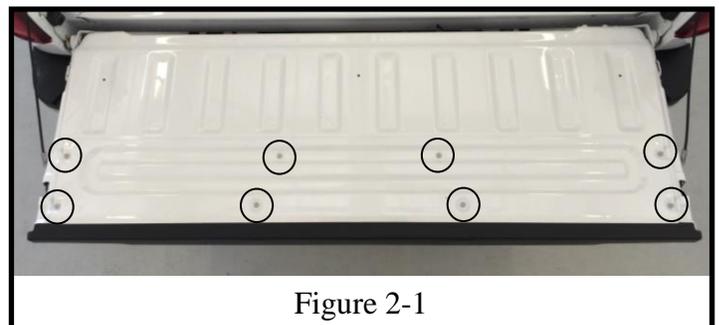


Figure 2-1

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

5. Install the provided threaded shafts into the back of the new emblem by hand until shafts bottom out in emblem.
6. Install the emblem into the tailgate and finish the installation by installing the washers and tightening the lock nuts using a 3/8" socket and ratchet. Be careful not to overtighten the fasteners and damage the tailgate

Rear Emblem Installation Kit: 92400

1. Gently pry against the smaller part of the emblem shown in figure 3.1. Be careful not to damage either part of the emblem
2. Set the factory emblem to the side. Prep the new emblem and the truck with the alcohol pad
3. Peel one side of the 3M tape and install it on the emblem. Center on emblem and apply pressure. Figure 3.2 shows an example of properly positioned 3M tape.
4. Remove the other side of the 3M tape from the emblem and position the emblem on the truck. Once the position is finalized, press firmly on the emblem against the truck for 30 seconds.

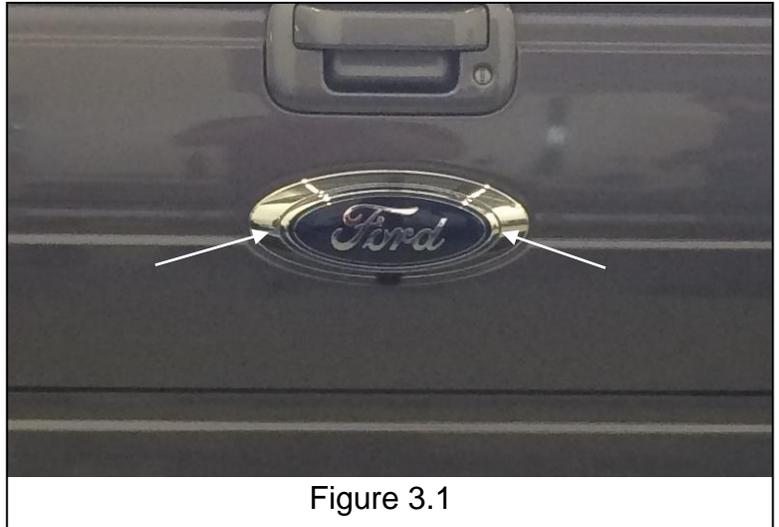


Figure 3.1

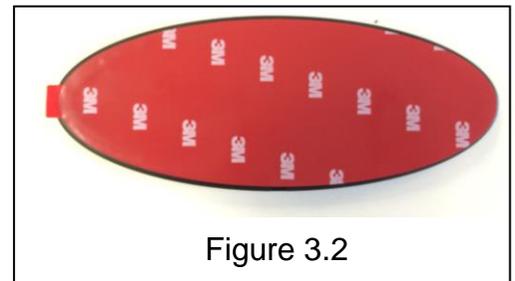


Figure 3.2

Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance on your new Ford Emblems

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.