PUTCO®

PUTCO HORNET™

LED BEACON SERIES 5 YEAR WARRANTY

INSTALLATION INSTRUCTIONS

Starlink Mounting Adapter *(Compatible with Putco Rooftop Mounting Brackets, Tec-Skins, Tec-Rails, and Racks)*

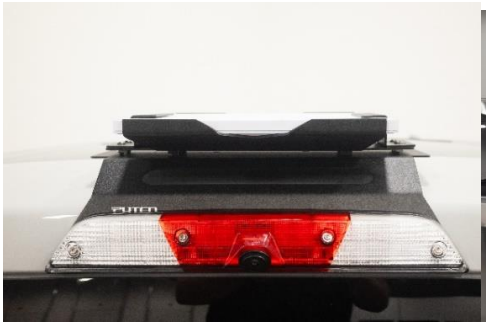

Congratulations on your purchase of a high-quality Putco product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974, Monday-Friday 8:00am-5:00pm (CST) Contact your Putco Dealer for other quality accessories.

Scan the QR Code for a Video of the Installation

Please read all instructions before installation and verify that all parts are included.

KIT CONTENTS

Description	Quantity	
Starlink Main Bracket ***(Used for all installations)***	**1**	
Starlink Side Bracket ***(Used for all installations)***	**2**	

1/4"-20 Screw Button HD 1/2"L ***(Used for all installations)***	**4**	
1/4"-20 Square Nut ***(Used for all installations)***	**4**	
1/4" Spacer 1/2"ODX1/4"L ***(Only used for rooftop mounting brackets installations)***	**4**	
M6-1.0 Screw GM WSHR 23mm ***(Only used for rooftop mounting brackets installations)***	**4**	

REQUIRED TOOLS

- **T30 Torx Driver**
- **5/32” Hex Key**
- **11mm or 7/16in Open Ended Wrench**

Headache Rack Installation

For this install, ¼”IDx½OD”x¼”L Spacers, M6-1.0 Screws w/ Washer, and M6 Rivnut (comes pre-installed in Main Starlink Bracket) are not used.

1. Slotting Square Nuts into Headache Rack

TOOLS REQUIRED – N/A

a. Slot the 4 1/4"-20 Square Nuts into your Putco BOSS™ Headache Rack using the slots milled into the top of the headache rack.

2. Placing Main Starlink Bracket

TOOLS REQUIRED – N/A

a. Place the Main Starlink Bracket on top of the headache rack and use its slots to line up the square nuts.

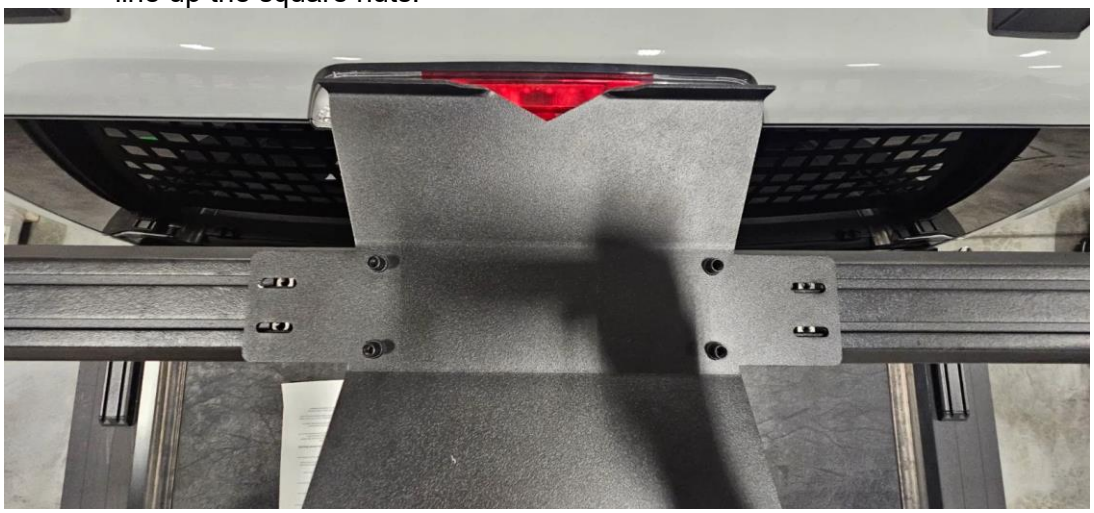

3. Installing The First Side Starlink Bracket

TOOLS REQUIRED – 5/32” Hex Key

a. Using the edges, corners, and slots of the Side Starlink Bracket and the Main Starlink Bracket, line up one Side Starlink Bracket on top of the Main Starlink Bracket.

b. Place and tighten two 1/4"-20x1/2"L button screw through the two brackets’ slots into the 1/4"-20 square nuts.

4. Placing Starlink

TOOLS REQUIRED – N/A

a. Place the Starlink G4 Mini Dish in the center of the Main Starlink Bracket by sliding the Starlink from the open side of the Main Starlink Bracket.

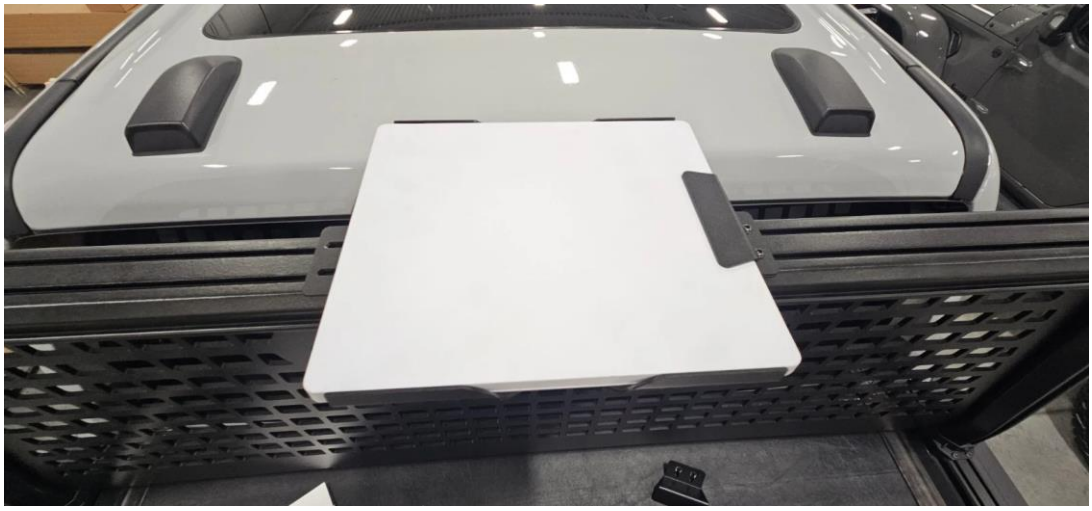

5. Installing The Second Side Starlink Bracket

TOOLS REQUIRED – 5/32” Hex Key

a. Using the edges, corners, and slots of the Side Starlink Bracket and the Main Starlink Bracket, line up one Side Starlink Bracket on top of the Main Starlink Bracket.

b. Place and tighten two 1/4"-20x1/2"L button screw through the two brackets’ slots into the 1/4"-20 square nuts.

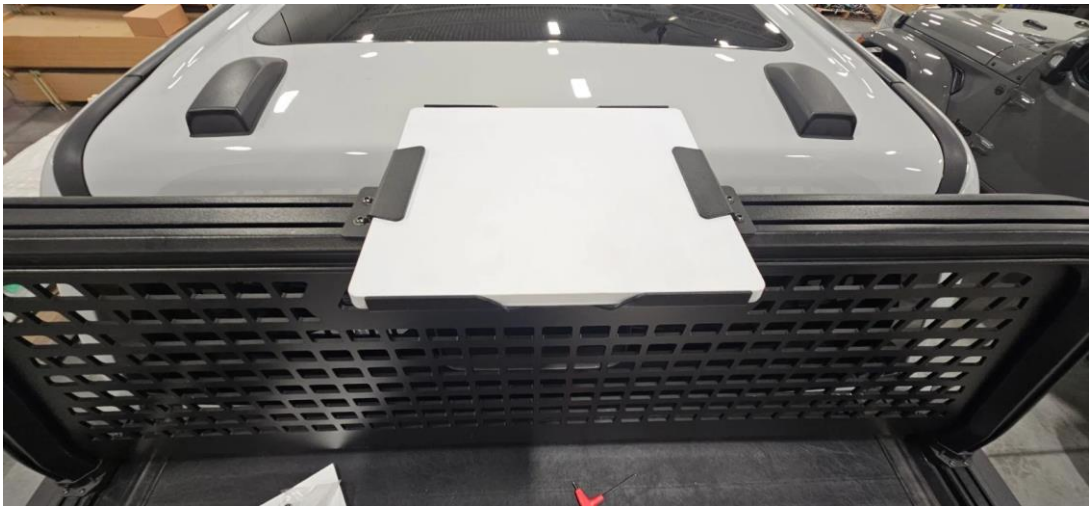

Rooftop Mounting Bracket Installation

For this install, all kit content is used.

1. Installing the First Side Beacon Bracket

TOOLS REQUIRED – 5/32” Hex Key and 11mm or 7/16in Open Ended Wrench

a. Using the edges, corners, and slots of the Side Starlink Bracket and the Main Starlink Bracket, line up one Side Starlink Bracket on top of the Main Starlink Bracket.

b. Thread and tighten two 1/4"-20x1/2"L button screw through the two brackets’ slots into the 1/4"-20 square nuts using the 5/32” Hex Key and 11mm or 7/16in Open Ended Wrench.

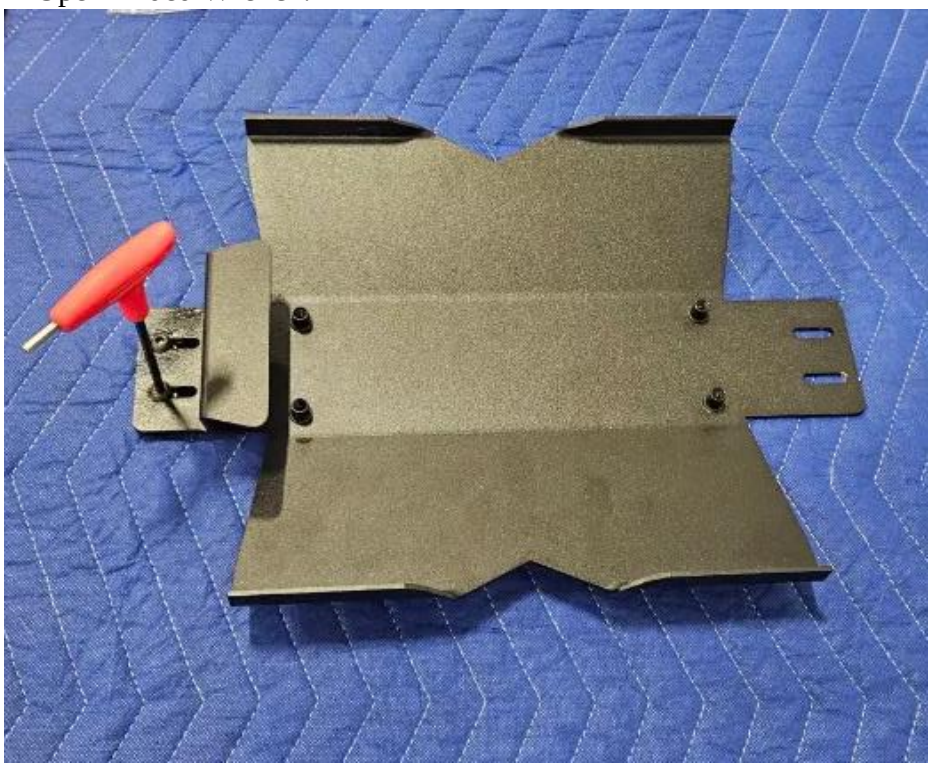

2. Placing Starlink

TOOLS REQUIRED – N/A

a. Place the Starlink G4 Mini Dish in the center of the Main Starlink Bracket by sliding the Starlink from the open side of the Main Starlink Bracket.

3. Installing The Second Side Starlink Bracket

TOOLS REQUIRED – 5/32” Hex Key and 11mm or 7/16in Open Ended Wrench

a. Using the edges, corners, and slots of the Side Starlink Bracket and the Main Starlink Bracket, line up one Side Starlink Bracket on top of the Main Starlink Bracket.

b. Thread and tighten two 1/4"-20x1/2"L button screw through the two brackets’ slots into the 1/4"-20 square nuts using the 5/32” Hex Key and 11mm or 7/16in Open Ended Wrench.

4. Placing the four 1/4inch spacers

TOOLS REQUIRED – N/A

a. Turn the Starlink Bracket Assembly upside down

b. Place the four 1/4 inch plastic spacers on top of the four M6 rivnuts

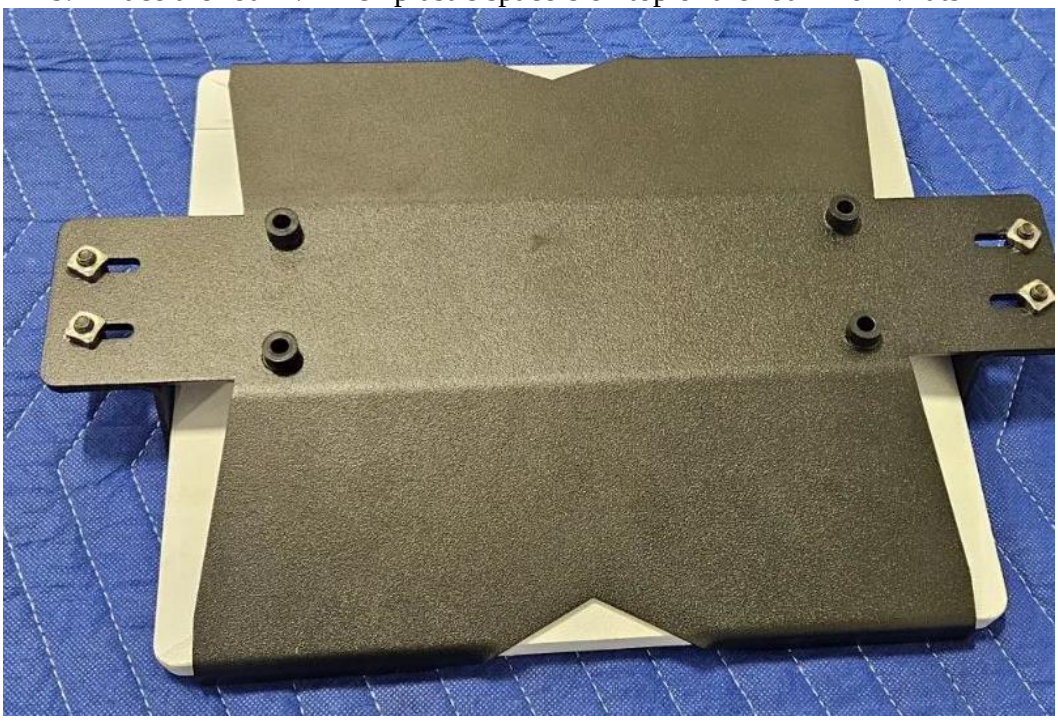

5. Aligning the Putco Rooftop Mounting Bracket

TOOLS REQUIRED – N/A

a. Place your Putco Rooftop Mounting Bracket (product may look different than pictured as there are multiple SKUs) on top of the 4 ¼ inch spacers.

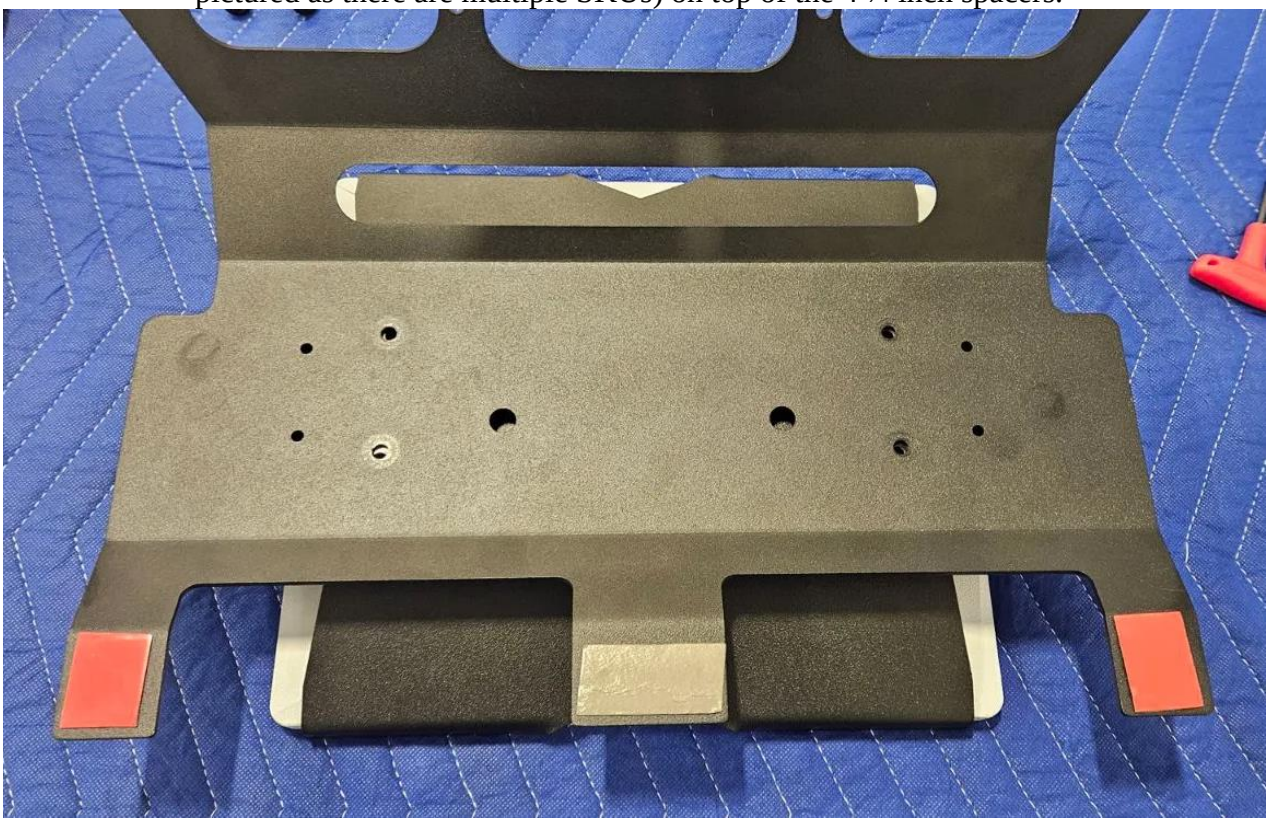

6. Installing Starlink Bracket Assembly onto Putco Rooftop Mounting Brackets

TOOLS REQUIRED – T30

a. Thread and Tighten the four M6 screws through the bottom of the Putco Rooftop Mounting Bracket

You are now ready to install the assembly onto your vehicle. Please follow the instructions included in your Hornet Bracket box to complete the installation.

Congratulations on completing the installation of your Putco product!

For information regarding your warranty, please visit www.putco.com/warranty.

Issues? Please Contact Our Technical Support Team: 1 800 247 3974

WARNING: Final Inspection required. Inspect product was properly Installed and all Installation instructions were followed.

For additional information, please visit our website at www.putco.com!