ADVANCED LED LIGHTING & TRUCK ACCESSORIES

Installation Instructions

For Ford Maverick (MY 22-25+) Front Molle Panel

For proper installation and best possible fit, please read all instructions BEFORE you begin.

Important Information

BEFORE you begin the installation process:

- Carefully read all instructions.
- Verify that all parts are included by checking the contents of your kit.

If any parts are missing or appear damaged, please contact our customer service team for assistance.

Customer Service

For support, please contact the Putco team, available Monday to Friday 8:30 AM to 5PM (Central Time).

1 800 247 3974
support@putco.com

Supported Vehicles

MAKE	MODEL	YEAR
Ford	Maverick	2022-2025+

Recommended Tools + Supplies

T40 Driver	T27 Driver	4mm Hex Key
10mm Wrench		

Kit Contents

Molle Front Plate	Upper Brackets x2	Lower Brackets x2
Rubber Feet x6	⅜” Spacers x2	Mounting Hardware

Step by Step Installation

1. Using a T27 Torx bit and driver, uninstall both upper factory tie down hooks. Save the hooks and hardware, as they will be used in the installation of your molle panel .
2. Using a T40 Torx bit and driver, uninstall both of the lower factory tie down hooks. Save the hooks and hardware, as they will be used in the installation of your molle panel .





3. Retrieve and identify the upper and lower brackets from your kit.

Upper Brackets:




LowerBrackets:

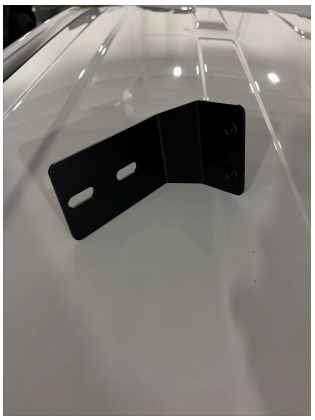

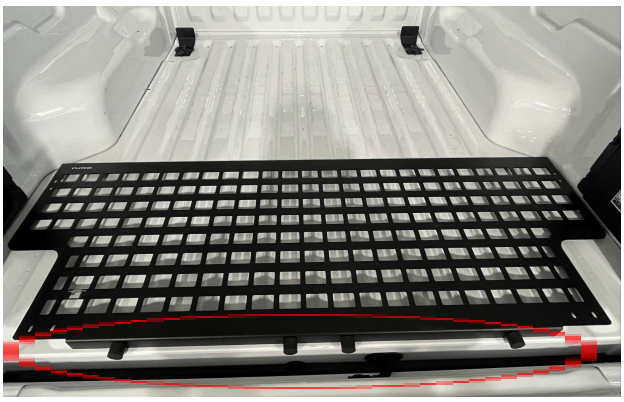4. Position the upper bracket between the truck bed and the tie-down, then secure using the original factory hardware. Make sure to install both of the upper brackets to both the passenger and driver side of the truck bed.	
5. Repeat the same process for the lower brackets. Follow the accompanying picture for the correct orientation of the brackets and the existing tie down. The existing tie down has a small metal tab that needs to face towards the tailgate. (Circled in the image)	
6. Retrieve the bulkhead molle panel and screw the rubber feet included in your kit into the riv-nuts located at the underside of the molle plate.	

7. Install the last 2 rubber feet to the top of the molle utilizing the correct mounting hardware and spacers. Make sure to use the correct holes located at the top of the plate. Put the spacer onto the rubber foot and push it through the hole of the plate from the backside. Fasten using a washer and lock nut on the front face using a 10mm wrench.

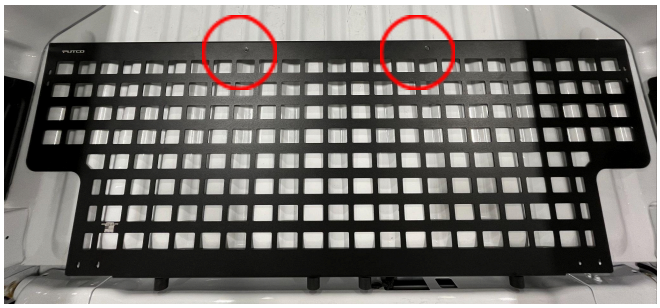





8. Fasten the front plate to the brackets using the supplied M6 bolts and washers using a 4mm hex key.
9. After securing the front plate to the vehicle, confirm all fasteners are fully tightened before driving the vehicle.



Congratulations on completing the installation of your Putco product!
For information regarding your warranty, please visit www.putco.com/warranty.

Issues? Please Contact Our Technical Support Team: 1 800 247 3974

WARNING: Final Inspection required. Inspect product was properly Installed and all installation instructions were followed.

For additional information, please visit our website at www.putco.com!