

## TOYOTA TACOMA (24-25+) FRONT MOLLE



For proper installation and best possible fit, please read all instructions BEFORE you begin.

### Important Information

BEFORE you begin the installation process:

- Carefully read all instructions.
- Verify that all parts are included by checking the contents of your kit.

If any parts are missing or appear damaged, please contact our customer service team for assistance.

### Customer Service

For support, please contact the Putco team, available Monday to Friday 8:30 AM to 5PM (Central Time).

1 800 247 3974

support@putco.com

### Supported Vehicles

MAKE	MODEL	YEAR
Toyota	Tacoma	2024-2025+

### Recommended Tools + Supplies


T30 Torx Driver	T40 Torx Driver	4mm Hex Key
-----------------	-----------------	-------------

### Kit Contents

Tacoma Front Molle	Brackets x2	M6 bolts x4
Washers x4		

## Step by Step Installation


1. Using the T30 torx driver, remove the front bed rail and mounting hardware. Set them aside as they will be re-used.

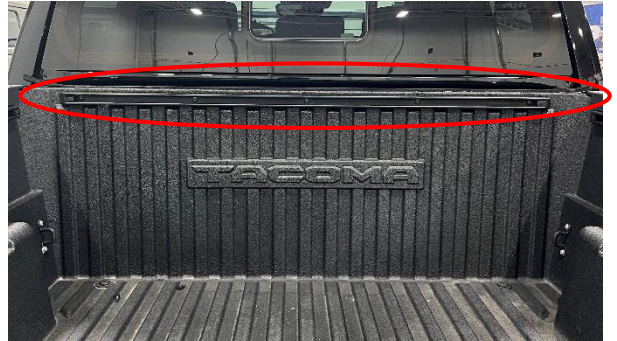

2. Using the T40 torx driver remove both lower factory tie down hooks. Set aside the hooks and hardware as they will be re-used.



3. Using the bracket mounting hardware (bolts and washers), loosely attach the brackets to the front molle plate by hand. The brackets should stick out the opposite side from the 90-degree bends on the front molle plate.

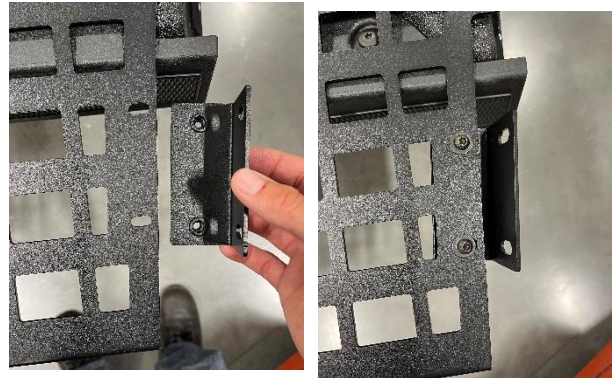

4. Place the front molle plate on the front of the bed. Place the front bed rail on top of the molle and fasten loosely using the factory hardware.



5. Secure each bracket between the truck bed and the tie-down hook. Secure using the factory hardware.



6. Using a 4mm hex key, tighten the bracket mounting hardware to the molle plate. Now go back and fully tighten the bed rail hardware.



Congratulations on completing the installation of your Putco product!  
For information regarding your warranty, please visit [www.putco.com/warranty](http://www.putco.com/warranty).

**Issues? Please Contact Our Technical Support Team: 1 800 247 3974**



**WARNING:** Final Inspection required. Inspect product was properly Installed and all installation instructions were followed.



For additional information, please visit our website at [www.putco.com](http://www.putco.com)!