

2015+ GMC Yukon/ Yukon XL Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

Putco is not liable for any damage due to installation

KIT CONTENTS:	
Description	Qty.
Boss Grille	1
1/4" - 20 Bolt	6
1/4" - 20 Nylock Nut	6
1/4" Washer	12
Only for Lighted Grille (below)	
10" Luminix Light	1
Wiring Harness	1
Switch	1
Light Bar Instructions	1

Tools Needed:

- 7mm, 10mm Wrench
- 7/16" Wrench
- 5/32" Hex Wrench
- Flat Head Screw Driver
- Saw- Recommended: Oscillating Hand Tool
- 1/4" Drill bit
- Pliers

Insert Grille Installation

1. Remove Grille from packaging. Check to see if all parts from above table of kit contents are included.



2. Open hood, remove plastic cover by removing 6 retaining clips with flat head screw driver. Locations shown above. Set aside retaining clips and cover.



3. Remove (4) 10mm bolts from the top of grille and set aside. Locations shown above.

LIMITED 90 DAY WARRANTY


Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.




Front of Car




4. Underneath front bumper, remove (8) 10mm bolts and (2) plastic push clips. Locations shown above are of just the driver side locations. Set bolts and push clips aside.

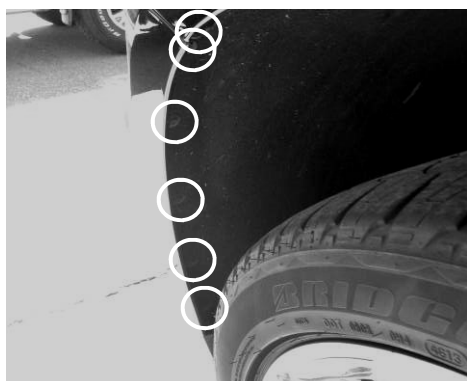

5. In front driver fender well, remove and set aside (6) 7mm bolts in locations shown. Repeat on passenger side.

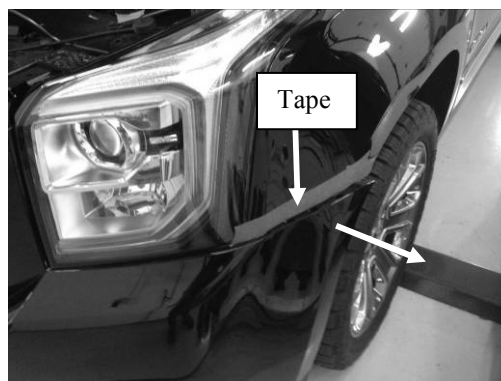

6. Apply tape to lower edge of fender. Pull front bumper away from the fender as shown above. Driver side is shown, repeat on passenger side.

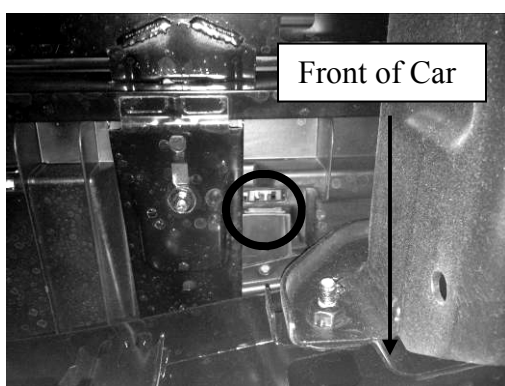

Front of Car

7. Underneath front bumper, use a straight screw driver and unclip (2) plastic clips that hold the grille to the frame. Passenger side is shown repeat on driver side.




8. Unclip wiring harness, Location indicated by circle. Remove bumper and grille assembly from vehicle. Lay in a safe location. Grille does not need to be removed from bumper to finish the installation.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

9. Use saw to cut inner part of grille and discard. Cut line is shown on first image of Figure 1. (The images in Figure 1 are shown from the back side of the grille)

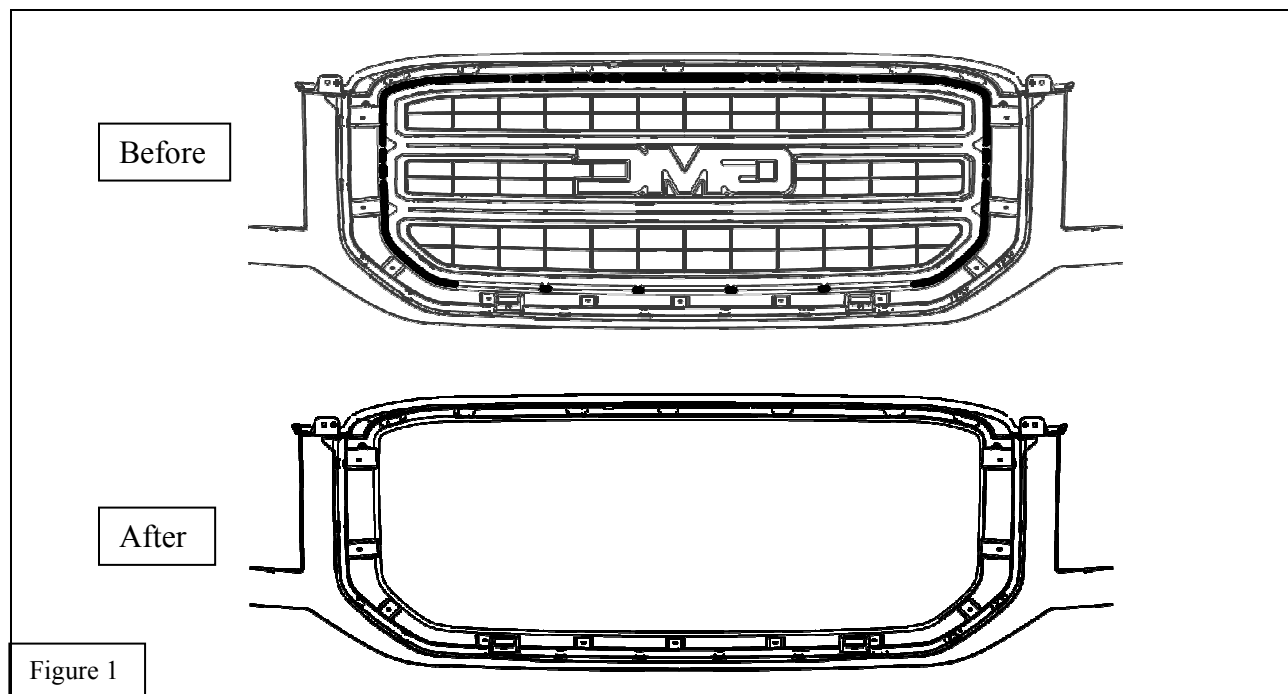

(All Yukon grilles will be cut in location shown above)

10. Insert Putco grille into the grille shell. Position grille in grille shell and mark holes through brackets for drilling. Remove Putco grille and drill 1/4" holes in locations marked.
11. Reinsert grille into grille shell and bolt in using supplied hardware. Tighten bolts using a 7/16" wrench and 5/32" hex wrench.
12. On back side of factory grille, use a flathead screwdriver or pliers to unclip GMC Logo from factory grille. The Logo will be held on with 5 clips. Once Logo is removed, place insert it into holes on Putco grille. Press firmly in until clips snap.
13. Once Putco grille is tightened in grille shell and logo is swapped out, bolt grille assembly back in vehicle and reassemble.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.