



Super Duty Boss Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Boss Grille (Lighted or Non Lighted)	1
Bottom Bracket	1
Top Right Bracket	1
Top Middle Bracket	1
Top Left Bracket	1
1/4"-20 x 3/4" Bolts	10
1/4"-20 Lock Nut	10
1/4"-20 Flat Washer	20

Tools Needed:


- 10mm Wrench
- 7/16" Wrench / Socket
- Flat Head Screw Driver
- Rubber Mallet

Boss Grille Installation

1. Remove Boss Grille kit from packaging. Check to see if all parts from above kit contents table are included.



2. Remove plastic cover by removing 14 retaining clips (number of retaining clips may vary) with flat head screw driver (locations shown above).

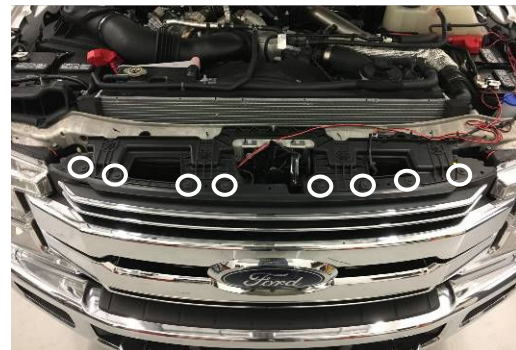

3. Once cover is removed, remove the top 8 grille screws with 10mm wrench (location shown above)

LIMITED 90 DAY WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. **Putco is not liable for any vehicle damage resulting from the installation of our Hood Shield.**

PUTCO




4. Pull upper grille forward to release upper grille clips. Once out, release 4 bottom metal clips with a flat head screwdriver by pushing down on them through hole in the plastic. Passenger side locations are shown. Repeat on driver side



6. Install metal clips removed from bottom of grille in step 5 on lower boss grille bracket. Locations shown above. All should be installed the same direction. (Rubber mallet may need to be used)



5. Remove grille. Once grille is removed, lay grille on flat surface (Protect grille front face) remove 4 metal clips with screwdriver from bottom of grille and set aside.

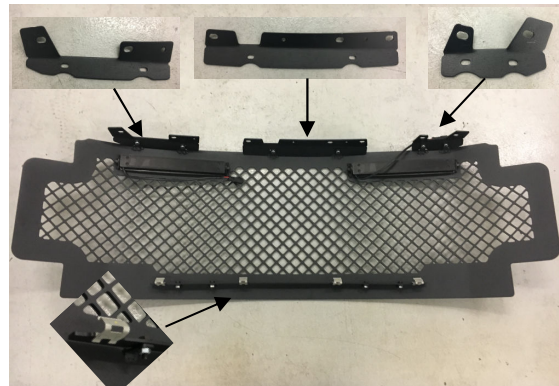

7. Install all brackets in locations shown. All brackets go on upper side of tabs. Use supplied hardware to mount all brackets. For lower bracket use bracket from step 6 and install so metal clips are facing up.

8. Install grille into truck using factory hardware from Step 2, adjust boss grille bracket to desired location and tighten boss grille hardware using 7/16" wrench. Tighten all factory hardware using 10mm wrench. Reinstall plastic cover and retaining clips from Step 1. Enjoy!



LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. **Putco is not liable for any vehicle damage resulting from the installation of our Hood Shield.**