



## Nissan Titan Tailgate Handle Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty
Tailgate Handle Cover	1
Pull Handle Cover	1

### Tools Required:

- Rubbing Alcohol
- Clean Towel

## Handle Installation

1. Clean and dry the vehicle thoroughly.
2. The vehicle surface temperature must be a minimum of 10°C (50°F).
3. Apply rubbing alcohol to the clean towel and wipe down the entire boxed area shown in Figure 1 on the tailgate. This will ensure proper adhesion to the vehicle.

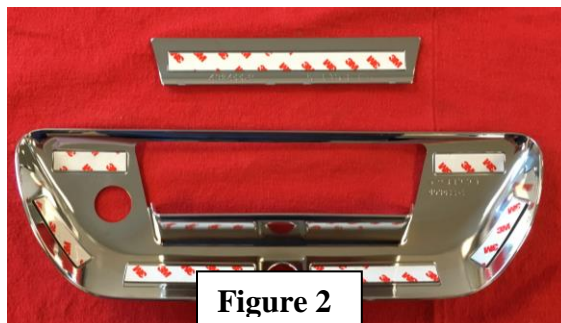

4. As shown in Figure 2, remove the 3M tape from back of the tailgate handle cover.
5. Align the tailgate handle cover over the existing handle. **IMPORTANT: Do not to allow the adhesive surface of the panels to touch the vehicle prior to being in the correct location.** When aligned, press and hold in position for 30 seconds to ensure proper adhesion.