


2021+ Ford F-150 Element Window Visor **Installation instructions**

**Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.**

Note: Vehicles Built before November 2020 Will require window recalibration.

Front Visor Installation


1. Lower front window visors into the down position. The key will need to be in the accessory position.
2. Determine which visor corresponds with the driver and passenger side doors. Start on either side of the vehicle as the same steps are repeated for the other side.
3. Before removing the tape liner, test fit the visor to ensure proper alignment.
4. Insert the top edge of the visor into the weather stripping. Work the edge of the visor into the weather stripping starting from the top edge.
5. To insert the lower edge of the visor into the channel, lift up and push back on the edge of the window visor, moving it up and over the window trim.

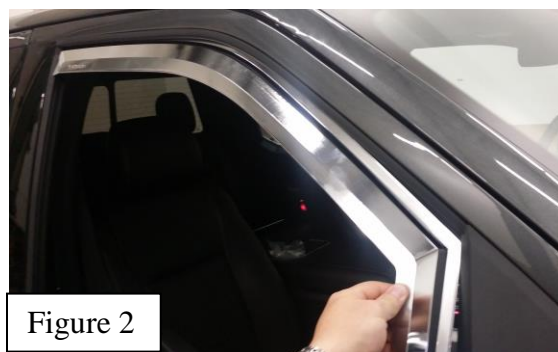


5. To insert the lower edge of the visor into the channel, lift up and push back on the front edge of the window visor, moving it up and over the window trim.
6. The hook slides in-between the mirror and the weather stripping sitting on top of the rubber window trim for support. Firmly press the hook into place.
7. After you have test fit the visor, remove the tape liner and repeat steps 4-6.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

8. Once the visor is installed grab 2 of the Tall in-channel support clips. **Figure 3** Shows which clips to use for which visor. The clips install in the channel directly on the backside of the visor.

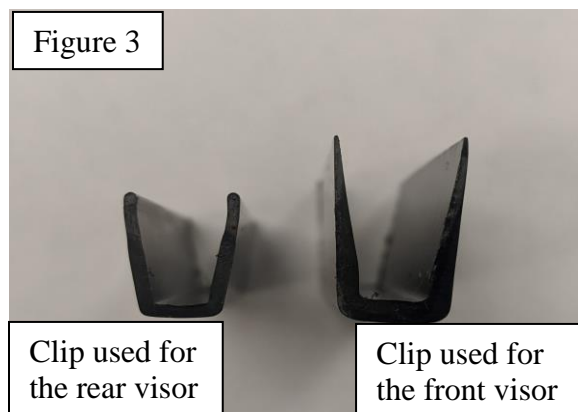

9. The clips should be installed in the locations seen in **Figure 4**.

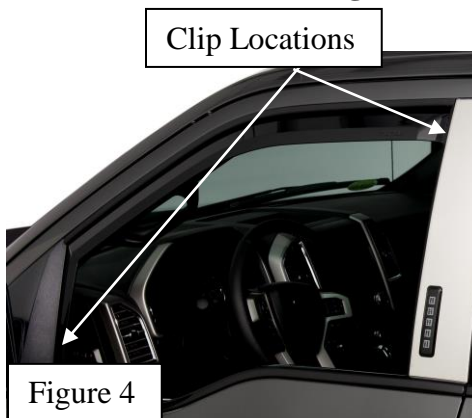


10. Once the clips are installed roll up the window and allow the visor to cure for 12-24 hours before use.
11. Repeat steps 3-10 for the other front visor

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

Rear Visor Installation

1. Determine which visor corresponds with the driver and passenger side rear doors. Start on either side of the vehicle as the same steps are repeated for the other side.
2. Lower rear windows into the down position. Test fit visors in window track to determine proper alignment.
3. Remove visor and wipe down weather-strip with rubbing alcohol that meets window visor.

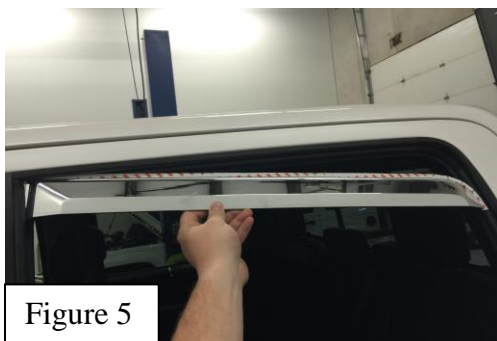

4. Remove the tape liner and place the rare visor into the channel. Place inner corner in position and swing rear up being careful not to contact the weather-strip with the tape until in position.
5. Once the visor is installed grab 2 of the short in-channel support clips. The clips install in the channel directly on the backside of the visor.
6. The clips should be installed in the locations indicated in **Figure 7**.



7. Roll up the window until the visor is fully seated. Allow 12-24 hours for the tape to cure before use.
8. Repeat steps 2-7 for the other rear visor.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.