



ELEMENT SKY VIEW

INSTALLATION INSTRUCTIONS

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

CONTENTS:	
Description	Qty.
Element Sky View Panel	1
Foam Weather Seal	2
Velcro Strip	2

No Tools Needed!



IMPORTANT SAFETY INFORMATION

Your SkyView replacement top is intended to be used to increase the fair weather enjoyment of your off-road capable vehicle. Before installation, please take a minute to review the following safety information and instructions.



Loss of vehicle control involves risk of death or serious injury, particularly to parts of your body not restrained within the vehicle. This product is intended for weather protection only and should not be relied upon to contain occupants in the event of an accident. To reduce the risk of injury:

- Always wear your seat belts.
- Always keep head, arms and body parts within the vehicle.
- Fully secure or stow the SkyView before driving according to the instructions. Never try to latch or unlatch the top while the vehicle is moving. The vehicle should be parked.
- Do not use the top if damaged.
- Read and follow all instructions and warnings accompanying this product and in your vehicles owner manual.



RISK OF EYE INJURY. Safety glasses should be worn at all times while installing or maintaining this product.

Installation Instructions:

1. Remove the front section of the factory hard top.



2. Remove the Velcro strip from the foam seal and attach to the vehicle above the door frame.




3. Attach the foam seal to the Velcro on the vehicle.





4. Place the Sky View roof panel on the vehicle.



5. Make sure the pins are fully seated and close the two front clamps. The pins are a snug fit and the top may require some adjustment for the pins to fully seat.

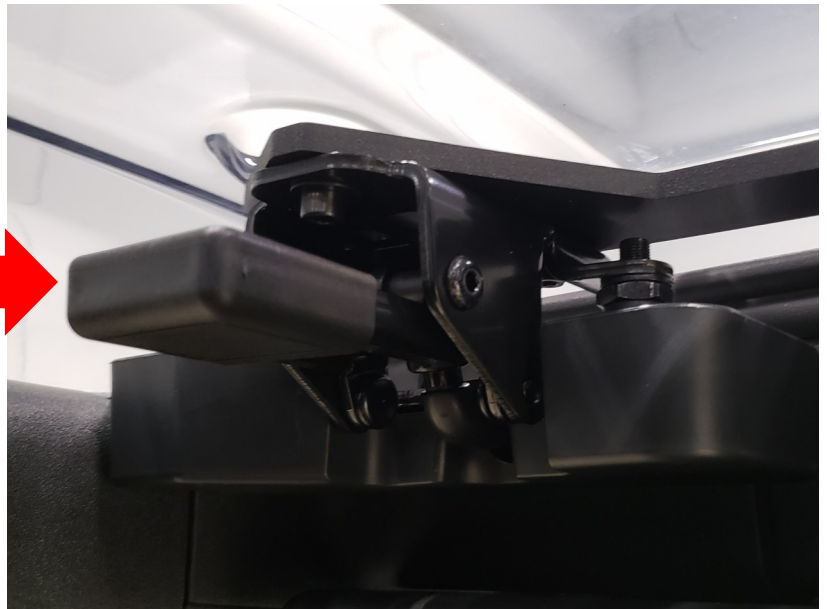

5. Turn the wing clamps starting with the front two clamps then moving to the four rear clamps.

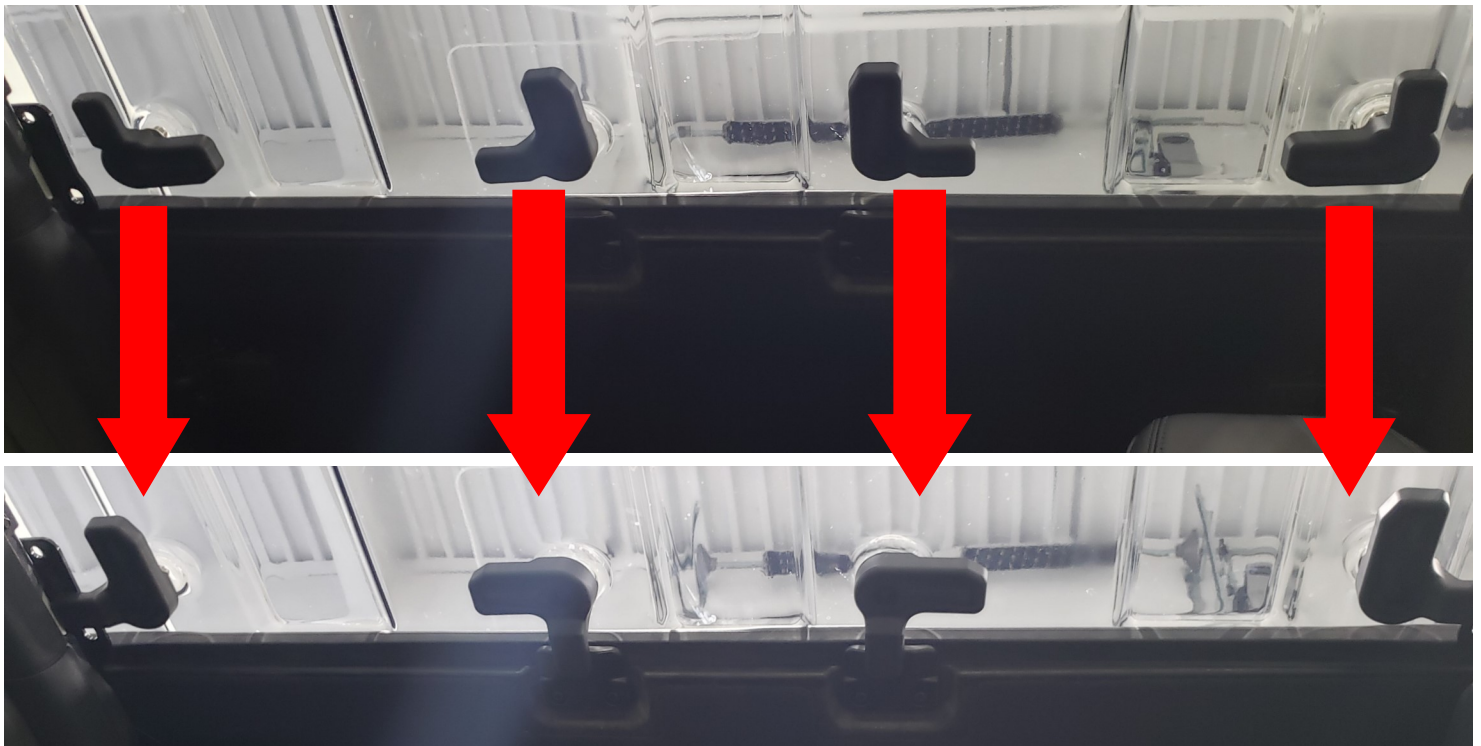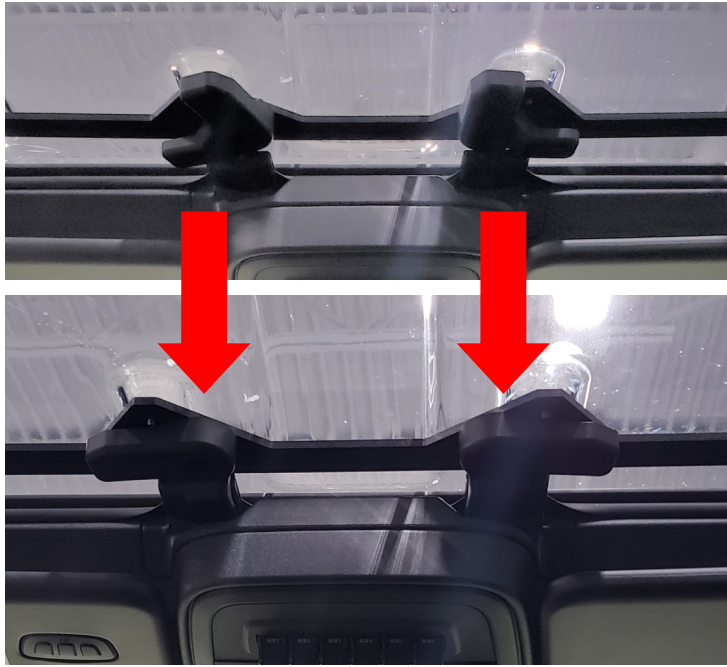

Your new Element Sky View is now successfully installed on your vehicle!

ELEMENT SKY VIEW

ROOF PANEL CARE INSTRUCTIONS

- Do NOT use chemicals or abrasives on the clear roof panel.
- Use only water and wipe GENTLY with a microfiber towel for cleaning. Applying too much pressure can scratch the Element Sky View roof panel.
- When taking the Element Sky View roof panel through a car wash, use only a TOUCHLESS car wash. The brushes in a regular car wash can scratch the Element Sky View roof panel.

