


## Blade LED Tailgate Light bar Instructions 2025+ Silverado EV Trucks



Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974  
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

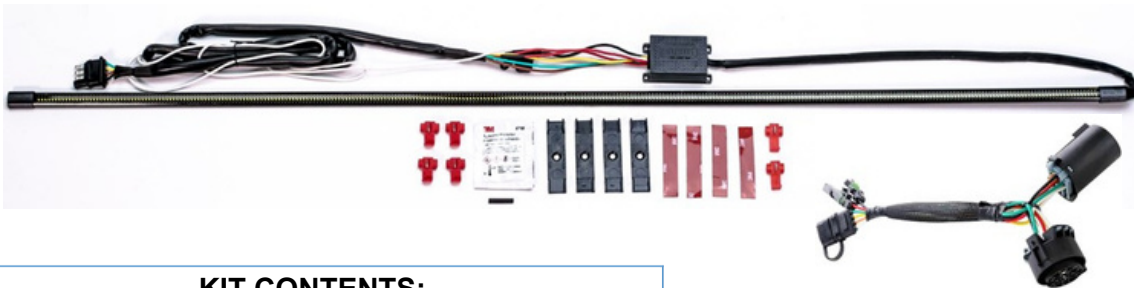

KIT CONTENTS:	
Description	Qty:
LED Light Bar	1 1 4
Quick Connect Harness	4
Black Plastic Bracket	
3M Tape Strips	

### Additional Tools Needed:

- Clean cloth
- At least 90% Isopropyl Alcohol
- Zip-Ties



## Installation Instructions

1. Verify the kit contents above. Contact Putco if anything is missing.




2. Install 3M tape on back of black plastic brackets as shown above, do not peel the backing yet.
3. Some models come with a spare tire and some do not and have an aero shield covering this area for better fuel economy. If your truck has the aero shield you will need to use a T15 Torx to remove the 10 perimeter screws.



5. Once the cover is removed, or if your trim did not have the cover, install the quick disconnect harness by removing the OEM harness from the bumper connector. Push the plastic tab to release then wiggle until it comes off.



6. With the OEM harness disconnected, plug the quick connect harness into the factory harness and the bumper connector. It will click when fully seated.
7. Now you can connect the quick connect harness to the light bar driver as shown below.
8. We recommend to use some dielectric grease between the 4 pin connector to help with corrosion.
9. Now tuck the driver and excess wires up behind the bumper and secure in place using a few zip ties. Avoid anything that gets hot like exhaust or pinch points like suspension.

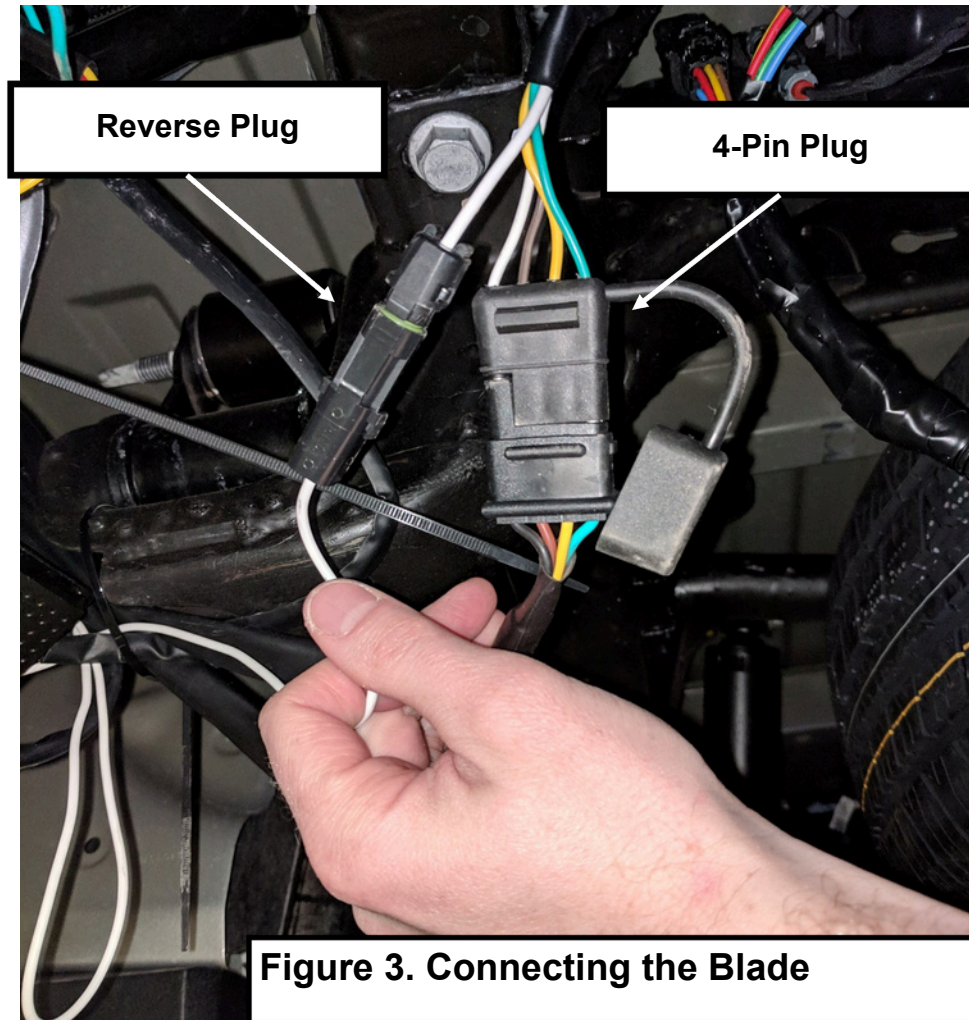

**Figure 3. Connecting the Blade**

6. To install the light bar, first disconnect it from the driver if you have not already done so.



6. Attach the clips with the 3M tape onto the light bar, one on each end and two in the middle approximately 19 inches apart.
7. Clean the area the light bar is attaching to with isopropyl alcohol. Wax, dirt or grease on the surface will not allow proper adhesion.
8. If you have an assistant, a second set of hands can help with aligning the light bar evenly.
9. Peel the backing off the 3M tape and lightly push the clips onto the surface. The surface must be at least 50°F (10°C) to bond properly. Place the light bar as low as it will go above the bumper. If you are happy with the placement push firmly on each clip for 5 seconds. Light bar will fully bond after 72 hours.
10. Reconnect the light bar to the driver box.



11. Open your tailgate and make sure the light bar does not rub when the tail gate is opened.
12. With the help of an assistant, test the functionality of the Blade (brake, turn signals, hazard and reverse).

***Enjoy Your New Putco Blade Light Bar!***