

## 2014+ Chevy Silverado/GMC Sierra LD Push Up Tie Down Rear Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at: 1-800-357-9261

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

**Please read all instructions before installation and to check to see that all parts are included.**

KIT CONTENTS:	
Description	Qty.
Push Up Tie Down	1
1/4"-20 X 3 1/2" SS Hex Head Bolt	4
Rubber Gasket	2
1/4"-20 SS Threaded Plate	4
Mounting Bracket	2
Stake Pocket Adapter Plate Drivers Side	1
Stake Pocket Adapter Plate Pass Side	1
3/8"-16 X 2" SS Hex Bolt	2
3/8"-16 X 3/4" SS Hex Bolt	2
3/8" Flat Washer	2

### Tools Needed:

- 5/32 Hex Key
- 9/16" Wrench
- Dremel


### Push Up Tie Down

### Installation

1. Remove Push Up Tie Down kit from packaging. Verify all parts from above kit contents table are included.
2. The front stake pocket holes are covered with a plastic bed cap. Using a "Dremel" or similar tool, cut out the plastic covering the hole, as indicated by the molded outline in the plastic bed cap.
3. Loosely assemble all the components from the kit as seen in **Figure 2**. The entire assembly will drop in as one unit.



Note: Ensure that the adapter plate corresponds to the direction of the mounting Bracket.

Refer to **Figure 1**.

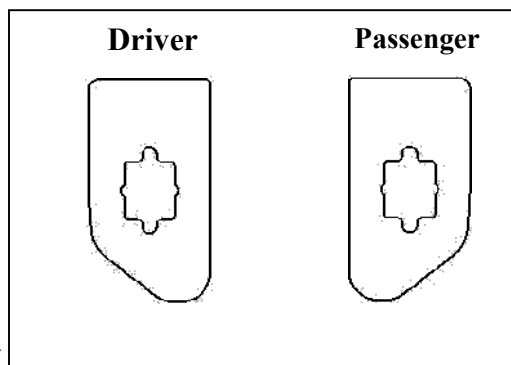

LIMITED 2 YEAR WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. **Putco is not liable for any vehicle damage resulting from the installation of our Hood Shield.**

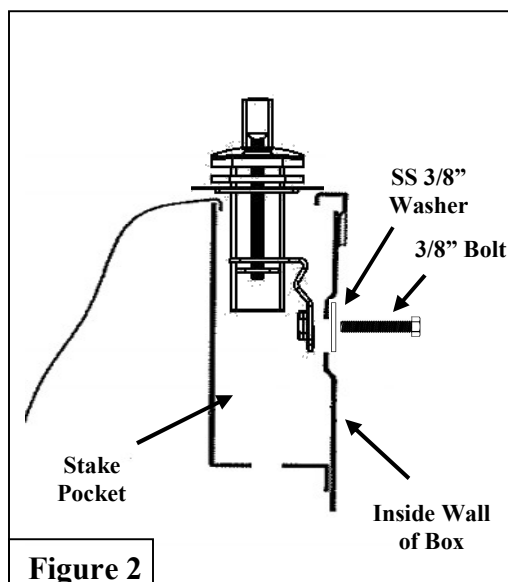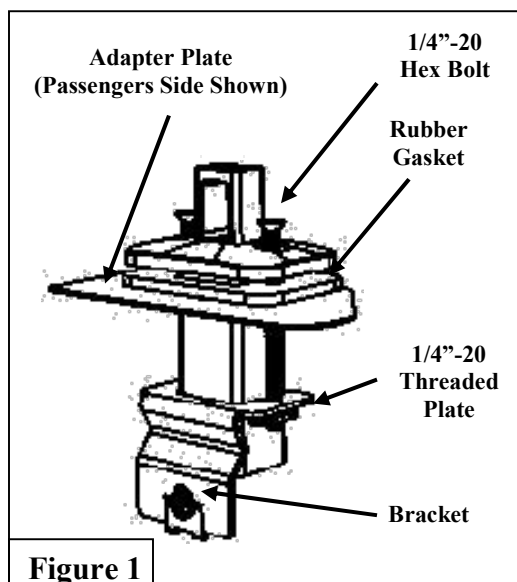

4. Drop the assembly into the rear stake pocket as shown in **Figure 2**. Move the assembly around until the Bracket lines up with the hole in the Inside wall of the box. Thread the bolt with washer by hand until snug to avoid cross threading.
5. With a 5/32 Hex key evenly tighten the two Hex Bolts on the tie down making sure the adapter plate and tie down is centered in the pocket.
6. Check that the tie down is functioning properly. Some applications require the 3/4" long SS hex bolt instead of the 2" long bolt. Fully tighten all fasteners.

### LIMITED 2 YEAR WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. **Putco is not liable for any vehicle damage resulting from the installation of our Hood Shield.**