

### 2019+ Ranger LED Rear Emblem Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and verify that all parts are included.

Kit contents are listed on the last page of this instruction manual.

Front and rear kits are sold separately.

#### **Tools Needed:**

- Sockets: 8
- Torx T25 and T30 drivers
- Flat head screwdriver
- Zip-ties
- Needle nose pliers

#### ***2018 Rear Emblem Installation:***

Check the kit contents (located on the last page) to be sure all parts are present before proceeding to installation.



1. Lower tailgate and remove the screws from the access cover. Remove access cover.



2. Through this area of the tailgate you can gain access to the back of the emblem.




3. Pry on the highlighted clips while pulling out on the emblem from the outside. **BE CAREFUL NOT DAMAGE THE PAINT OR SHEET METAL OF THE TAILGATE.**




4. Install threaded rods and tighten by hand. Install camera from OEM emblem into the same area on the LED emblem. Install the emblem on the tailgate using provided flange nuts. **BE CAREFUL NOT TO OVERTIGHTEN FASTENERS.**



5. Remove (2) 8mm bolts from driver's tail lamp. Pull the tail lamp towards the rear bumper to disengage clips that secure it.

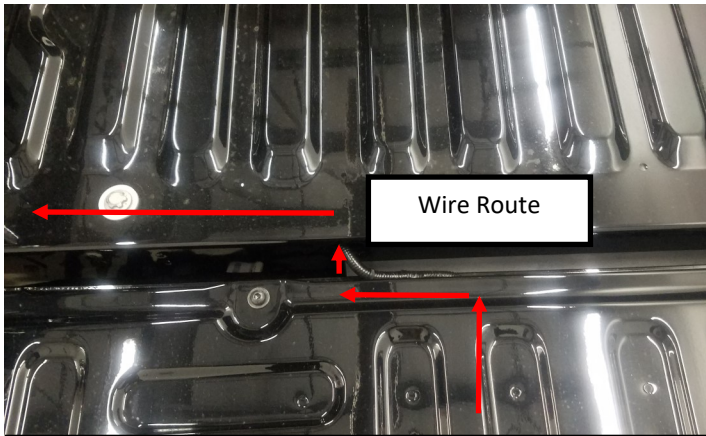

6. Feed LED emblem wires to driver's tail lamp harness. Follow existing harness coming out of tailgate. Route the wire under the vehicle, behind the bumper, and up into the tail lamp cavity. Protect the wire with split loom or abrasion resistant sleeving.

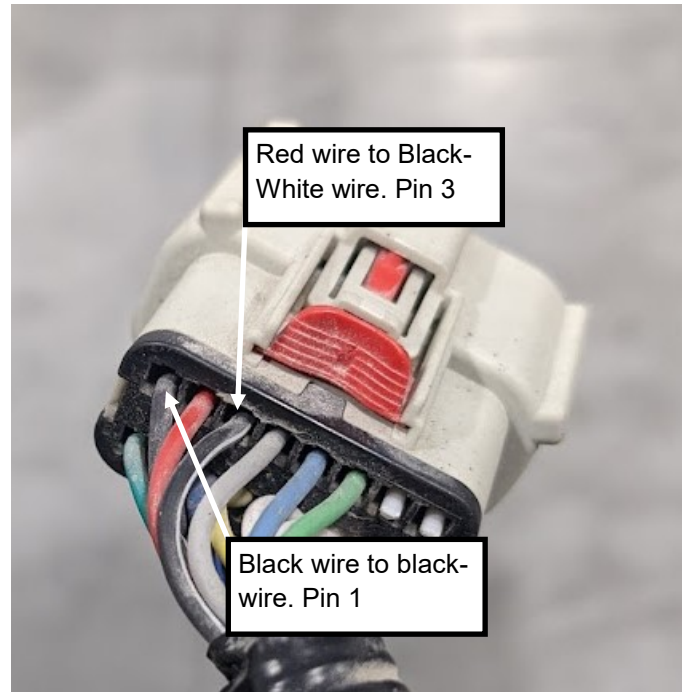

7. Using provided ScotchLoks, splice the wires into tail lamp harness. Connect the emblem red wire to the Black and White wire, and the emblem black wire to the black wire on the connector.



8. Test the emblem. It is tied to the running lamps and should be on when the Daytime Running Lamps or head lights are on. Zip-tie wires into place, making sure the wire is protected from pinch-points and sharp edges.

***Kit Contents***

<b>KIT #92652 CONTENTS:</b>	
<b>Description</b>	<b>Qty.</b>
Rear Emblem	<b>1</b>
Threaded Rod	<b>2</b>
M5x0.8mm Flange Nut	<b>2</b>
3M ScotchLok Connector	<b>2</b>

***Thanks for your purchase of a high quality  
Putco product!***